



4F-1, 236, Fu-Te 2<sup>nd</sup> Rd., His Chih,

Taipei Hsien, 221, Taiwan

TEL:886-2-6616-6692 · 2694-6687

FAX:886-2-2694-6875 · 2694-5097

# Y-motor Changing Process

## RX/RX II

Revision History :

Version	Date	Page	CONTENTS
1.0	May 24, 2014		First release
2.0	Sept. 16, 2015		Add RX II


Tools Required:

- Phillips screwdriver

1. Use Phillips screwdriver to loose 3 screws on left cover to open the cover.




2. Un-plug 2 cable from Y motor connectors on the terminal PCB.

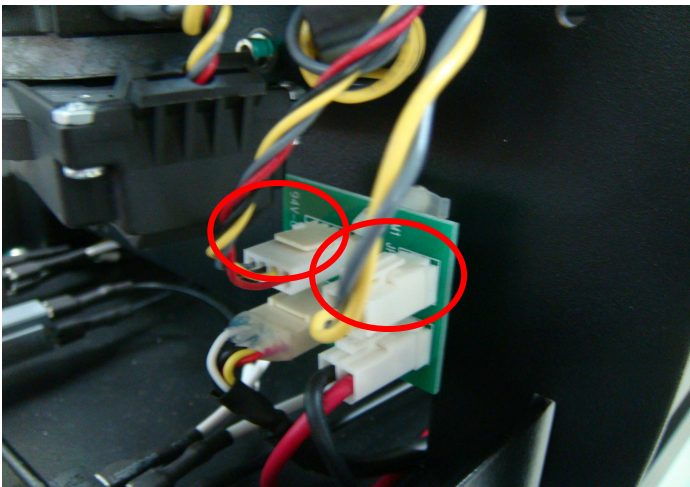

3. Use Phillips screwdriver to remove four screws.

NOTE: Do not remove one by one, loose and remove the screws synchronously.

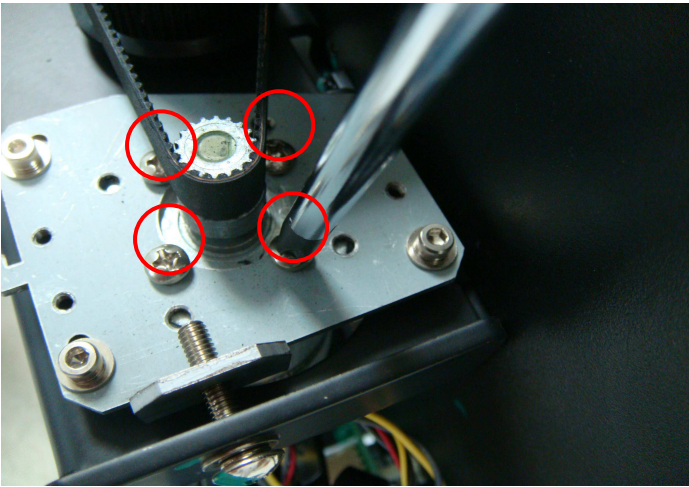

4. Replace the Y motor

